


USER GUIDE

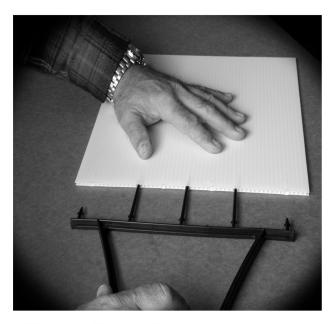

⇒Lay on flat surface⇒Guide prongs into corrograted channels



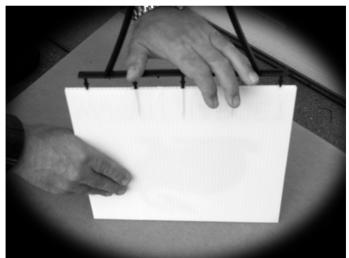

For easier ground penetration, rock side to side slightly while pushing down with foot.



Slip sign face into frame as shown



